 


LUXOR[®]

CONTROLLER

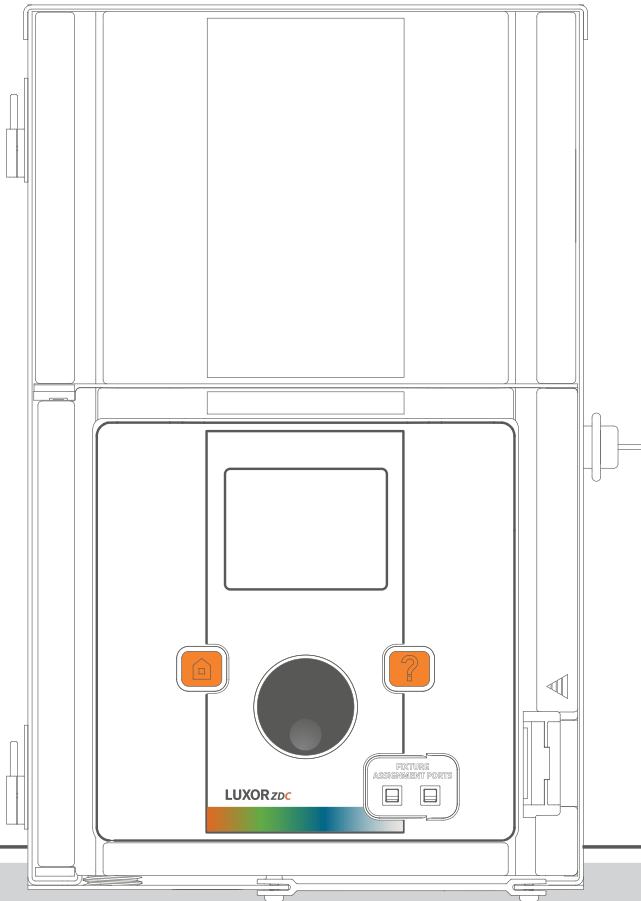 


Quick Start Guide

FXLuminaire[®]

Luxor Components

- 1 Core Cover
- 2 Chassis
- 3 Facepack Connection (RJ-11)
- 4 Chassis LED
- 5 Terminal Blocks
- 6 Fuse Cover
- 7 Linking Ports (RJ-45)
- 8 Facepack
- 9 LCD Screen
- 10 Home Button
- 11 Help Button
- 12 Clickable Scroll Wheel
- 13 Fixture Assignment Ports
- 14 SD Card/Battery Slot

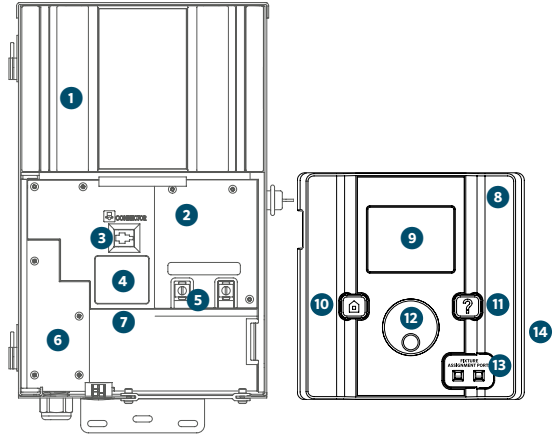


General Information

- **SCROLL WHEEL**
 - Pressing scroll wheel allows field to be selected or editable
- **FIRMWARE FILES**
 - FXL.com -> Products -> Power & Control -> Luxor ZD/ZDC -> Documents tab
 - File Name(s):
 - ZD Facepack: fx_fpack.efi
 - ZDC Facepack: zdcfpack.efi
 - Chassis (Luxor Linking): fx_ch024.efi
 - Chassis (non-linking): fx_chass.efi
 - Flash: fx_flash.efi
- **SUPPORT VIDEOS:** www.fxl.com/luxorvideos


Location Setup

 - Select **SETUP**
- Select **LOCATION** using scroll wheel
- Select **LATITUDE (Lat)/LONGITUDE (Long)** using scroll wheel
 - Long = Up/Down
 - Lat = Left/Right

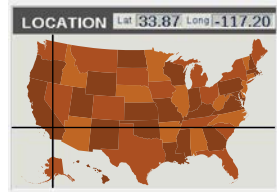




Fixture Group Assignment

 - Insert integrated fixture or Luxor Accessory leads into **ASSIGNMENT PORTS** 13 located on front of facepack
- **ASSIGNMENT** screen will appear once fixture or accessory is recognized
- Select desired Group for fixture or accessory
- Scroll to **PROGRAM** and press scroll wheel
- “**Assignment Successful**” confirms fixture or accessory has been assigned to the desired group

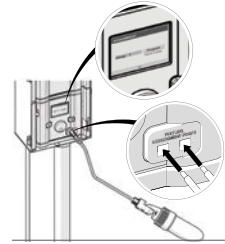


Creating Colors

   - Select **COLOR**
- Scroll to desired color label (C1 - C250)
- Scroll to **COLOR** and press scroll wheel to enter **COLOR SELECTION** screen
- Set **HUE** (0°-360°) using scroll wheel
- Set **SAT** (0%-100%) using scroll wheel
- If necessary, adjust **HUE** and **SAT** values by selecting desired values and adjust using scroll wheel

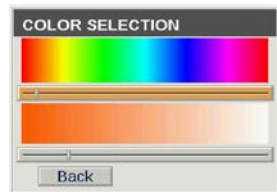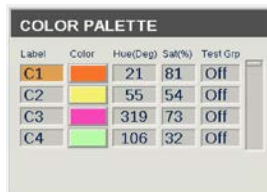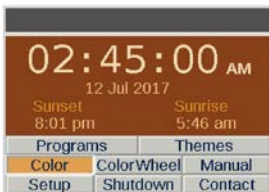

Creating Themes

 - Select **THEMES**
- Select desired Theme letter (A-Z)
- Enter desired groups, including intensity and color (ZDC only), for the selected Theme
- Select **TEST THEME** to preview desired Theme

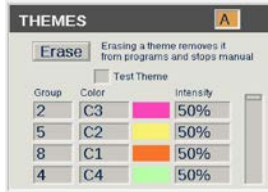



Creating Programs

- Select **PROGRAMS**
- Select desired Program letter (A-F), Program run days (Mon – Sun), and Event time
- For desired Event time, select Group, Theme, or All Lights
- Select Color (ZDC only) for desired Group or Theme
- Set Intensity (off or 1-100%) for Groups or All Lights and set Intensity (on/off) for Themes



Firmware Updates

  - Locate latest firmware on Luxor product page located under **RESOURCE** tab on fxl.com
- Save desired firmware (Facepack, Chassis, Flash, Fixture) onto SD Card
- Insert SD CARD into facepack
- Simultaneously press **HOME** (H) and **?(“HELP”)** (I) to enter **DIAGNOSTIC** screen
- Press scroll wheel to enter **FIRMWARE LOAD** screen
- Select desired update type (Facepack, Chassis, Flash, Fixture)
- “Firmware update complete” confirms firmware was successfully updated

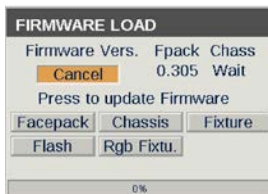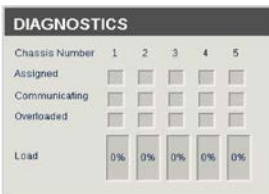

Find more information about your product, including tips on installation, programming, and more.

