 


LUXOR[®]

 
 
WI-FI COMPONENTS

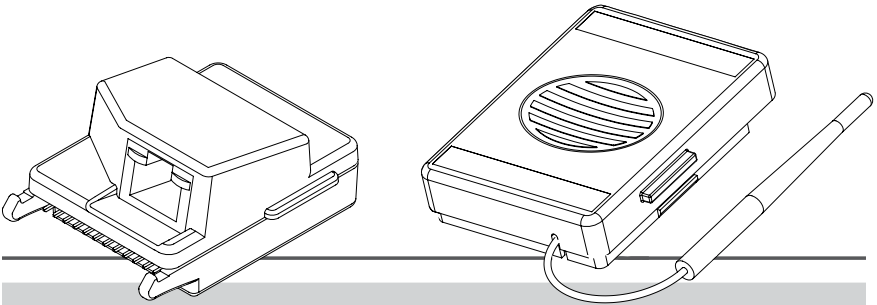

Quick Start Guide

FXLuminaire[®]

Wi-Fi Components



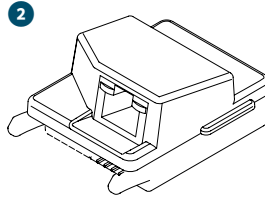
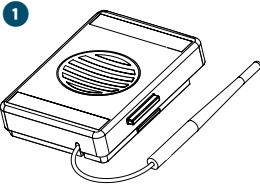


General Information

- **WI-FI CONNECTION**
 - Signal Strength: 70+ RSSI
 - 2.4 GHz routers only
- **LAN**
 - max 300 ft. Ethernet cat5 cable connection between Luxor and router
- **SUPPORT VIDEOS:** www.fx1.com/luxorvideos

Wi-Fi/LAN Module Installation

    - Insert **WIFIMOD 1** or **LANMOD 2** into facepack

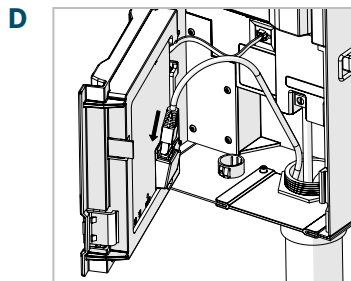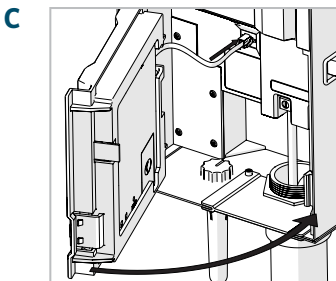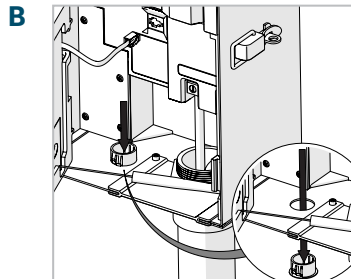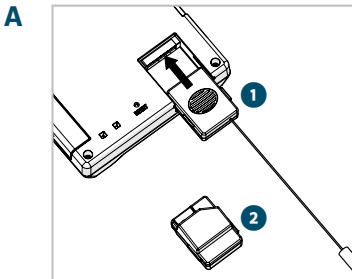


Wi-Fi Direct Connect Setup

- Install **WIFIMOD 1** into facepack
- Select **SETUP**
- Select **WI-FI**
- In Wi-Fi Setup screen, confirm **WIFI: DIRECT CONNECT READY**



Wi-Fi Network Connect Setup

 - Install **WIFIMOD 1** into facepack
- Select **SETUP**
- Select **WI-FI**
- Select **NETWORK**
- Select desired network from list of **AVAILABLE NETWORKS**
- If network is secured, enter Wi-Fi Password

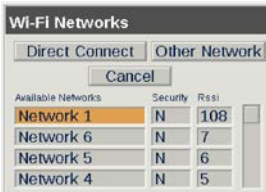

LAN Network Connect Setup

- Install **LANMOD 2** into facepack
- Select **SETUP**
- Select **LAN**
- Confirm LAN is **CONNECTED**



Find more information about your product, including tips on installation, programming, and more.



 fxl.com/luxorhelp

 1-800-733-2823