


DETAIL LEGEND:

- 1 FX LUMINAIRE "A-HS" FIXTURE PER PLAN
- 2 LEAVE 8" MINIMUM WIRE LOOP COILED IN CONSTRUCTION SLEEVE FOR FUTURE SERVICE.
- 3 WOODEN WALL
- 4 CUT A 7.5" X 1.75" REC HOLE THRU THE WOOD WALL TO MOUNT "A-HS" FIXTURE. MOUNT SLEEVE IN PLACE USING 1" #6 GALVANIZED DECK SCREWS.
- 5 IF WALL IS STUCCOED OR COATED, USE THE "CONSTRUCTION COVER" TO KEEP CAVITY CLEAN AND CLEAR OF DEBRIS.

NOTES

- A. INPUT VOLTAGE: 110-277V
- B. FIXTURE IS DESIGNED FOR DOWN LIGHTING ONLY. DO NOT USE IN UP LIGHT POSITION.
- C. FOR COPPER OR BRASS FIXTURES, AVOID PREMATURE PATINA BY HANDLING WITH GLOVES
- D. FOR LUXOR CONTROL, ASSIGN FIXTURE OR LUXOR CUBE® TO GROUP NUMBER PRIOR TO INSTALLATION

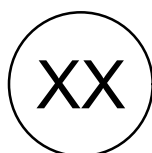

LED WALL LIGHT (A-HS) WOOD WALL MOUNT

FXLuminaire. W.A-HS.03

NOT TO SCALE
REV: 2020-09-09